## PEPIRB Self Test



#### PEPIRB Self Test

A. Open the flip-top lid. Do NOT pull off the red anti-tamper cover.

B. Self-test uses the OFF/Test button, located under the flexible handle of the red anti-tamper cover on the right side

C. Slide a finger under the flexible handle of the anti-tamper cover to operate the OFF/Test button. Press the switch and HOLD IT DOWN until the self-test sequence is completed. This will take 8 seconds. While the button is held down and self-test sequence is in progress, the red indicator light marked "ON" (above the switch) will illuminate.







NOTE: REPETITIVE TESTING WILL DIMINISH THE BATTERY LIFE

### PEPIRB Self Test (CON'T)

- D. On successful completion of the self-test sequence, the <u>green light</u> on the left will flash <u>3</u> times and the buzzer will sound <u>3</u> times. The PEPIRB will switch itself off after completing the self-test, even if the off button is still held down.
- E. Release the button and close the flip-top lid.
- F. If self-test fails, repeat test procedures. If the problem persists, check the battery expiration date. <u>DO NOT</u> use the PEPIRB, immediately notify Division R&SS Officer. Division R&SS officer will collect PEPIRB to verify problem and notify OTO office Immediately for replacement.

# PEPIRB/PLB Registration

- ALL PLB's must be registered and copy of completed registration sent to OTO office if not already registered by the OTO office.
- Can be registered online or by Fax, Mail or E-mail.
- OIA (station Georgetown):
   Listed as Primary Emergency
   Contact
- Sector Command Center: Listed as Alternate Emergency Contact



Save Time! Register your beacon online at: www.beaconregistration.noaa.gov

Mall or Fax to: NOAA/SARSAT NSOF, E/SP3 4231 Sultand Ros Sultand, MD 2074

#### Official 406 MHz PLB Registration Form

PLB Information  Beacon ID (Union	ue Identifier Number)
(45 didli charachar ID o	ovided by PLB manufacturer)
	odel No
PLB Registration	
■ New PLB Registration ■ Replacement	of PLB Decal
	this PLB is a replacement for a previously registered PLB.
	the old PLB unique ID number
Owner/Operator Information	
Name(Last, First, Middle Initial)	Telephone
Mailing Address	( ) Home
	( ) Home Work Cellular Fax Other
City State/Province	( ) Home Work Celular Fax Other
ZIP (Postal) Code Country	Home   Work   Celular   Fax   Other
E-mail	7990-000
Type    Land Vehicle   Boat   Aircraft   None   Other	_
Emergency Contact Information (Please Indicate someone of Name of Primary 24-Hour Emergency Contact:	ther than the owner) Name of Alternate 24-Hour Emergency Contact:
Telephone	Telephone
( )   Home   Work   Celular   Fax   Other	( ) Home Work Cellular Fax Othe
( ) Home Work Cellular Fax Other	( ) Home Work Cellular Fax Othe
Area Code    Home   Work   Celluler   Fax   Other	( ) Home Wark Cellular Fax Other
( ) Home   Work   Celuler   Fax   Other	( ) Home Wank Cellular Fax Othe
Signature	Date

If you have any questions about this form or with PLB registration in general, please call 1-888-212-6AVE (7283) or 301-817-4515. For information on the U.S. Search & Rescue Satellite-Aided Tracking system, please visit: www.sarsat.noaa.gov

OMB (0646-0295) Expires: 30JUN2011

# PLB <u>Do's</u> and <u>Don't's</u>

- <u>Do not</u> tamper with red cover (PEPIRB)
- <u>Do not</u> place near large metal objects
- Do not submerge/cover antenna
- <u>Do not</u> test more than once a month (PLB)
- <u>Do</u> notify OIA before conducting self test

# Most Asked Question & Misunderstanding!

- **-Question**: Are the SAR vest lanyards supposed to be 36" before or after the item is attached?
- -Answer: (Directly from the SAR VEST Maintenance Procedure Card)
  - One cut 42-inch length of Type I nylon cord, should be used.
  - Attach the 42-inch nylon cord to the item and the other end to the tab located in the designated pocket using a bowline followed by an overhand knot.
  - NOTE: Finished length of line from knot to knot shall be 36-inches or greater.
  - ANY inspections, corrections or PPE changes should <u>ONLY</u> be completed by the designated AUX R&SS officer or Station Georgetown R&SS PO.

#### Float Coat

#### #344-A Powerboat Jacket w/CG Auxiliary Markings (<u>Float Coat</u>)

The original bomber style flotation jacket with extra comfort and mobility. Cut waist-length for freedom of movement. Soft Suisse Aire<sup>TM</sup> foam with a coated nylon shell.

Multiple pockets with full hook and loop closures.

USCG Approved Type III. SOLAS-grade reflective tape. Waterproof construction and design. Rib knit waist band and wrist bands. Four pockets, sleeve utility pocket, & inside chest pocket.

Sizes: XS-XXXL.



#### SAR Vest

#460-A Utility Vest w/ CG Auxiliary Markings

New comfort series utility vest is specially designed with a soft, lightweight mesh on the upper half of the vest for comfort and ventilation.

USCG Approved Type III. Tough, nylon oxford outer shell material. Two 1" encircling

body straps with zipper front for secure fit. Two pockets with hook and loop closure.

Light, durable Crosstech® flotation foam. Drings for attaching gear. SOLAS-grade reflective tape.

Sizes: S-XXXL



# Anti Exposure Coveralls (Mustang)

# #327-A Challenger<sup>TM</sup> Work Suit w/ CG Auxiliary Markings

Features sealed seams for 100% integrity and allows full range of motion. All day comfort in the world's most demanding sea environments.

- USCG Approved Type III/V (Anti-Exposure Coverall).
- Adjustment Straps on ankles, thighs, and wrists.
- Insulated hood to keep wind and rain out.
- Inflatable head support.
- Adjustable waist belt.
- Leg zippers for easy on/off over work boots.
- Neoprene wrist closures for a comfortable, watertight fit.
- Generous pockets plus hand warmer pockets.
- Double layer of durable nylon fabric in seat and knees.
- 62 sq. in. of SOLAS grade reflective tape.


Sizes: XS–XXXL





Regardless of weather and other equipment, Personal Flotation Devices and a Boat Crew Survival Vest with properly maintained and functional equipment shall always be worn underway.

# PPE TEMPERATURE REQUIREMENTS

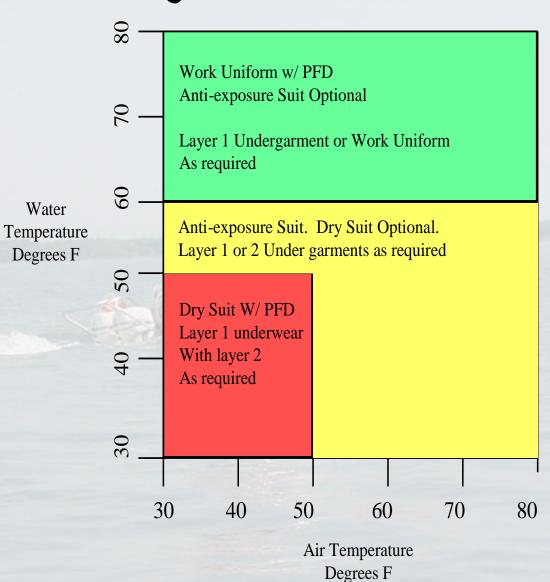

When do we inspect PPE gear?

Semi-Annually, and before and after every use.

Coxswain should insure that each Boat Crew member is properly equipped with required PPE before getting underway!

Why do we inspect PPE gear?

For your safety and the safety of your crew and passenger's.

What are we looking for?

Rips, tears, zipper lock, rust, missing gear or broken clips, faded letters, degeneration of reflective material, etc...

- Who is responsible for inspecting PPE?
  - -R&SS Officer for semi-annual inspections,
  - -Each individual to whom PPE is issued, prior to and after each mission.

The R&SS Officer ensures that all PPE inspections are conducted on time and all deficiencies are noted and/or corrected. All PPE inspections must be logged on inspection forms and the OTO office must be notified of all results.

### Reference's

Rescue and Survival System's Manual,
 COMDTINST M10470.10G

Boat Crew Seamanship Manual,
 COMDTINST M16114.5B

 Non-Standard Operator's Handbook, COMDTINST M16114.28