

# Division 11 ICOM F1000S Quick Guide

AUXNET radio channels may only be used for:


- **Coast Guard or Auxiliary Business** – informal or formal concerning events, procedures, activities, and programs
- **Disaster and Special Event Communications**
- **Communications Training**
- **Logistics and Movements** - coordination and direction of mobile station, vessel, aircraft, and personnel movements.
- **SAR Support and DF Coordination** - to supplement the VHF Marine channels

1. Use proper Coast Guard radio procedures. If you are uncertain, obtain training.
2. When transmitting, identify yourself by your personally assigned facility call sign or the call sign assigned to you for the duration of an event.

## RADIO'S DISPLAY SCREEN ICONS


**SIGNAL STRENGTH**  
Displays relative receive signal strength level

**LOW POWER**  
Appears on channels programmed for low power or when the battery is almost discharged

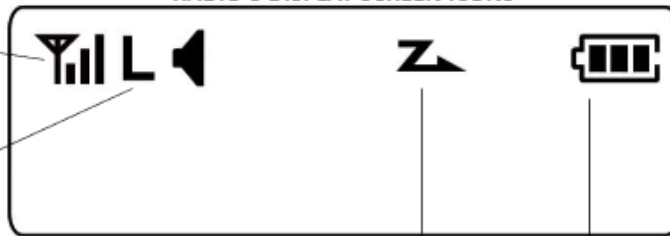

**SCAN**  
blinks when scanning

**BATTERY INDICATOR**  
Displays the remaining battery charge and blinks when almost discharged

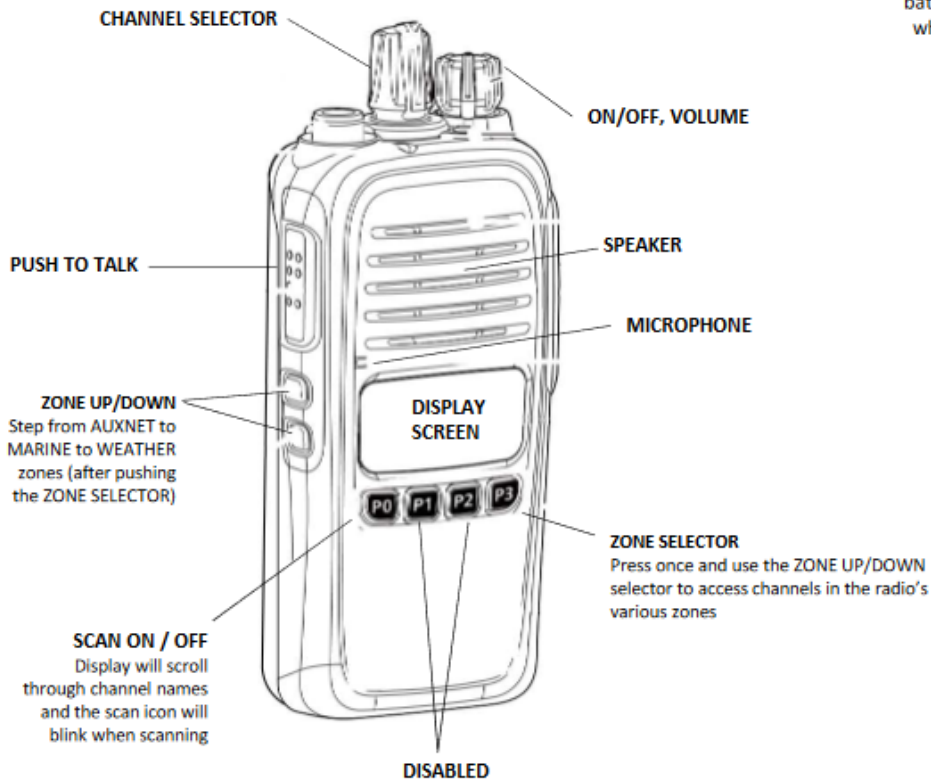

**PUSH TO TALK**

**ZONE UP/DOWN**  
Step from AUXNET to MARINE to WEATHER zones (after pushing the ZONE SELECTOR)

**SCAN ON / OFF**  
Display will scroll through channel names and the scan icon will blink when scanning

**DISABLED**

**ON/OFF, VOLUME**

**SPEAKER**

**MICROPHONE**

**DISPLAY SCREEN**

**P0 P1 P2 P3**

**ZONE SELECTOR**  
Press once and use the ZONE UP/DOWN selector to access channels in the radio's various zones