

6. Testing Your Beacon

Your beacon has the ability to perform 2 different tests to ensure the beacon is working perfectly. The first is a basic self test which checks the beacons Data Integrity and Memory; 406 MHz Synthesizer; RF Power/Battery; GPS header and sends a satellite burst. The second test is a GPS Self Test that actually turns the GPS Receiver on, downloads your position and then transmits this data in the Self Test satellite burst.

Note: Self test should only be performed in the first 5 minutes of any hour.

Basic Self Test (No GPS Data)

During a Self-test your beacon will send a 406 MHz signal coded as Self-test to the satellite system and a 121.5 MHz homing signal.

This beacon has enough excess battery life to perform **60** self tests over the 5 year life of the battery.

To perform a Basic Self Test:

1. Unclip the antenna latch from the case.
2. Move the antenna into the upright position
3. Depress the Test button for 1 full second



A Green Light will flash followed by a Second Long Green Light flash and the strobe light. This indicates a successful Basic Self Test.

If a red LED flashes at the completion of the Self-test, your beacon has failed. Repeat the Self-test. If the failure persists, contact [ACR Electronics](#) or an [authorized Battery Replacement Center](#) for servicing of your beacon.

ACR strongly recommends performing the **Self-Test once per month**, or at least two weeks prior to a trip allowing enough time for service should your beacon require it.

Battery Witness Seal Life

If your beacon flashes an initial Amber light at the beginning of the Self- test, this indicates that your electronic witness has been broken and you have used more than 1 hour of battery life. While the beacon will still operate normally in a distress situation, ACR strongly recommends you have your battery replaced and the electronic witness reset to ensure that you will have at least 24 hours of battery power.

Light Scheme	Light Meaning
	Self Test Passed
	Self Test Passed (Battery: <24 Hours)
	Self Test Fail
	Self Test Fail (Battery: <24 Hours)
	Battery Fail